AEOLUS

Professional Pet Drying Equipments Sup plier

AEOLUS

PET CLIPPER

MC-989KIT/990KIT

New Generation

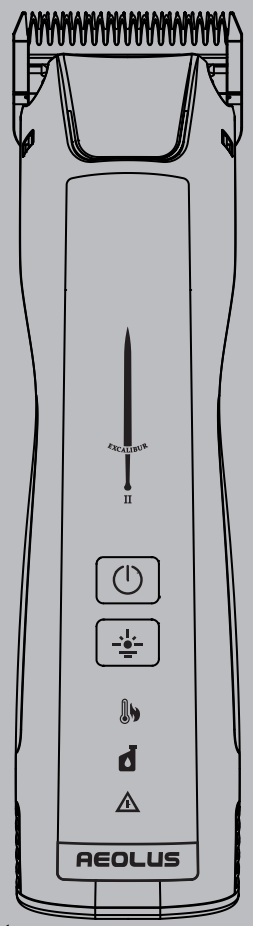

User Manual

Distributor Contacts

AEOLUS

Producer: Shanghai TOEX International Trading Co., Ltd.
Address: Room 403, Building 3, No.288, Qianfan Road,
Songjiang District, Shanghai, 201612, China

Manufacturer: Shanghai Xunyuan Industrial Co., Ltd.
Address: No. 29, Lane 1509, East Qianming Road,
Fengjing Town, Jinshan District, Shanghai.

www.groomart.hu I hello@groomart.hu I www.groomart.eu

Catalog

Brief Introduction..... 1
Technical specification..... 1
1. Main Body..... 1
2. Battery..... 1
3. Charger (Desktop charger/Wall charger)..... 2
4. Operating Condition..... 2
5. Parts List..... 2
Product Introduction..... 3
1. Main Body..... 3
2. Accessories..... 4
3. Functions..... 5
Detailed Introduction..... 5
1. Appearance..... 5
2. Vacuum Nozzle..... 6
3. Adapting Connectors..... 7
4. Indicators..... 7
5. LED Lighting..... 7
6. Anti-slippery Surface..... 7
7. Battery..... 8
8. Combs..... 8
9. Washing Tray..... 9
10. Desktop Charger..... 9
11. Supplements..... 9
Installation Process..... 10
1. Process..... 10
2. Removal of blade..... 11
3. Cleaning..... 12
Warning..... 12

Brief Introduction

The product uses a new generation brushless motor with high torque output, mainly used for trimming pet hair. By cutting between the upper and lower blades, the hair entering the clipper head is cut. The product has the advantages of beautiful appearance, light weight, flexible operation, labor-saving, low vibration, low noise, and long service life.

Technical specification

1. Main Body

Length	188mm
Width	47mm
Height	55mm
Clipper body (MC-989KIT)	230g
Clipper body (MC-990KIT)	230g

2. Battery (MC-989KIT)

Voltage	7.4V
Charging time at 20℃	≤60min
Low speed operating time at 20°C	≥120min
High speed operating time at 20°C	≥90min
Battery type	Li-ion battery
Battery capacity	1400mA
First setting rotational speed	2500r/min
Second setting rotational speed	3500r/min

3. Transformer (MC-990KIT)

Voltage Input	100V-240V
Voltage Output	7.6V
Frequency	50-60Hz

4. Operating Condition

Maximum power consumption	18W
Working temperature range	5-40°C

5. Parts List

MC-989KIT	
Clipper body	1 PC
Blade	1 PC
Brush	1PC
Battery	1 PC
Spare battery	1 PC
Desktop charger	1 PC
Transformer	1 PC
Plug adapter	5 PCS
Washing tray	1 PC
Adapter for Vacuum cleaner	1 PC
Nozzle for vacuum cleaner	1 PC
Combs	5 PCS
Tube	1 PC

MC-990KIT	
Clipper body	1 PC
Blade	1 PC
Brush	1 PC
Transformer	1 PC
Plug adapter	5 PCS
Washing tray	1 PC
Adapter for Vacuum cleaner	1 PC
Nozzle for vacuum cleaner	1 PC
Combs	5 PCS
Tube	1 PC

Product Introduction

1. Main Body

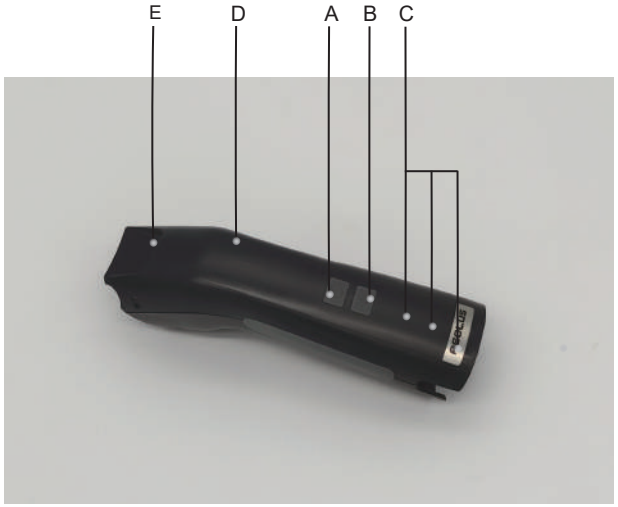

Figure 1 Parts of the clipper body

A. Power button: Short press to turn on, long press for 0.6 seconds to turn off
Speed adjustment button: Short press to switch between slow/fast when turned on
Cleaning button: In the power on state, quickly double-click the button to enter the cleaning mode

B. Light button: In the power on state, short press the light button to switch between three levels of light brightness

C. Blade overheating warning light
Refueling reminder light
Overload warning light

D. Power indicator and cleaning function indicator light

E. Three level LED lights

www.groomart.hu I hello@groomart.hu I www.groomart.eu

2. Accessories



Figure 2.1 Desktop Charger (MC-989KIT)



Figure 2.2 Washing Tray (MC-989KIT/990KIT)



Figure 2.3 Adapter



Figure 2.4 Transformer (MC-990KIT)



Figure 2.5 Battery (MC-989KIT)



Figure 2.6 Transformer for Desktop Charger(MC-989KIT)

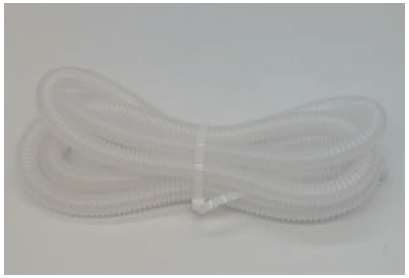

Figure 2.7 Tube



Figure 2.8 Nozzle



Figure 2.9 Blade

3. Functions

The product is mainly used for pet hair trimming, which cuts the hair that goes to the blade edge by the upper and lower blades. The product features a beautiful appearance, light weight, flexible operation, energy saving, small vibration, and low noise. The upper blade is made of ceramic, with self-lubricating feature from the ceramic material, thus brings great sharpness, durability and long service life.

Detailed Introduction

1. Appearance

The product is mainly dark gray color, with overall co-ordination and premium look. In addition, the matching combs are painted in different colors according to different sizes for easy distinguishing.



Figure 1.1 MC-989KIT Clipper with Desktop charger

www.groomart.hu I hello@groomart.hu I www.groomart.eu



Figure 1.2 MC-990KIT Clipper with Transformer

2. Vacuum Nozzle (MC-989KIT/990KIT)

1. The vacuum nozzles are made of translucent PC material, it's easy to check the hair suction situation, and does not cover the LED light at the front end.
2. Crescent opening ensures the LED light would not be affected, and enlarges the space that hair could go through, to avoid hair blocking.
3. There are two slots on both sides to increase retaining force and avoid excessive transforming.
4. The small semicircular plates are the removing handles for vacuum nozzle removal.



Figure 2 Translucent nozzle



Figure 3 Adaptor

3. Adaptor (MC-989KIT/990KIT)

The adapter uses rotary contraction, with a maximum matching diameter of 60mm for vacuum cleaners, and help attaching the flexible hose to most vacuum cleaner nozzles in the market.

4. Indicators

1. Battery status indicator: The indicator light indicates the current battery level through different colored lights. Blue represents the battery level of 100%~75%, yellow represents the battery level of 75%~25%, and red represents the battery level is below 25%. When the red indicator light is on, it reminds to charge or replace the fully charged battery as soon as possible.
2. Cleaning instruction: When the clipper is in the on state, double-click the power button, the green indicator light will flash, enter the cleaning mode, and the clipper will automatically stop working after running for 2 minutes, indicating the end of the cleaning program.
3. Blade overheating indicator: When the temperature of the blade is greater than 41 degrees, the overheating reminder light of the blade is always on, indicating that the blade may cause impact or injury to pets, and it is necessary to cool down the blade or replace it with another available blade.

Lubrication indicator: After the blade has been working continuously for 10 minutes, the lubrication reminder light remains on, reminding the user to stop and lubrication. After lubrication, the machine can be turned on to continue working. Timely lubrication can effectively extend the service life of the blade.

Overload indicator: When the clipper cuts, such as tangled hair, foreign objects in the hair, or pets with dense hair, exceeding the power protection value set by the machine, the overload reminder light will remain on. When the overload continues for more than 3 seconds, the machine will automatically stop working. If you need to continue working, you can restart it.



Figure 4.1 Battery status indicator



Figure 4.2 Reminder indicator

5. LED Lighting

Extra wide lighting area can cover the cutting area of the blade to bring a broader and clearer view.

6. Anti-slippery Surface

The anti slip surface is coated with adhesive and has fine corrosion patterns to increase friction, prevent slipping, and improve hand feel.



Figure 5 LED Lighting



Figure 6 Anti-slippery surface at side of clipper

www.groomart.hu I hello@groomart.hu I www.groomart.eu

7. Battery (MC-989KIT)

Parts:

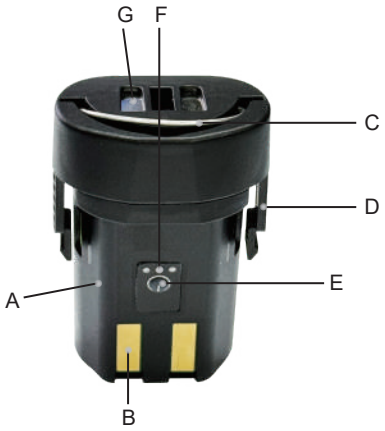

A. Battery Shell
B. G. Electrode
C. Hanging Ring
D. Buckle
E. Battery Button
F. Battery Indicators

Figure 7

1. The side is embedded with anti slip patterns, with strong integrity and easy insertion and removal.
2. The pole piece is located at the bottom of the entire battery pack, making it convenient to cooperate with the charging dock and safer.
3. There is an embedded movable hanging ring above, which supports hanging and can bear the weight of the whole machine without pulling it off.
4. Battery button, press to display real-time battery level. Three lights on represent a battery level of 100%~75%, two lights on represent a battery level of 75%~25%, and one light on represents a battery level below 25% that needs to be charged in a timely manner.

8. Combs (MC-989KIT/990KIT)

The combs are made of plastic base and metal teeth with wide opening space which receives great volume of hair in movement.
The comb blades are available in a wide range of sizes, including 3mm,10mm,13mm,22mm and 25mm, depending on the desired length of hair.
The comb only matches A5-30 blades, and other blades are not compatible.
Easy to remove without any tools, and it connects firmly.



Figure 8.1 Combs



Figure 8.2 Combs with clipper

9. Washing Tray (MC-989KIT/990KIT)

1. A draining tank with serrated front end to help wash liquids return



Figure 9.1



Figure 9.2

2. The supporting face could fit the clipper perfectly.
3. Usage: After pouring the specialized cleaning solution for the blade into the washing tray, the blade does not need to be disassembled. Place the clipper in the washing tray, turn on the clipper, double-click the button to enter the cleaning mode. After cleaning for 2 minutes, it will automatically stop. Remove the clipper, dry or wipe it dry, and then refill it with oil to continue working.

10. Desktop Charger (MC-989KIT)

1. Shaped like a large stone, the charging set gives a novelty feeling, keeping the consistency and uniqueness of the modeling. Two charging slots are provided, which can charge the battery individually, or the whole machine directly.
2. The indicator light is red and flashes when charging. While the battery is fully charged, the indicator light shows green and stays on.
3. The adapter is equipped with plugs from five countries, including the UK, US, Europe, Australia, and China, for easy replacement. When replacing the plug, hold down the adapter button and rotate it counterclockwise to remove it. There is no need to rotate the button clockwise to secure it in place during installation.

11. Supplements

Charging method (MC-989KIT)
If the battery has run out, remove the charging set, put the battery into the charging set with the electrodes facing the front of the charging set.When the charging set indicator turns green, it shows the battery is fully charged.



Figure 11.1



Figure 11.1

www.groomart.hu I hello@groomart.hu I www.groomart.eu



Figure 11.2

OR, if the battery is low,
put the clipper into the left slot for charging.

Installation Process

1. Process

Step one: Pick up a battery, place the side of the battery with buttons and the side of the clipper with buttons facing the same direction, pinch the buckles on both sides of the battery with your fingers and push the battery into the end of the clipper, and then release your fingers to complete the installation of the battery.
Step two: take one suitable blade.



Figure 1.1



Figure 1.2

Step three: Insert the front buckle block of the clipper into the metal slot on the front of the blade, align the swing rod with the gap in the middle position of the blade, rotate to close the blade.



Figure 1.3



Figure 1.4

www.groomart.hu I hello@groomart.hu I www.groomart.eu

Step four: Confirm that the buckle is hooked onto the blade holder and the blade cannot be moved.
Step five: Select one comb according to the desired length of hair. Snap the metal piece at the end of the comb onto the position underneath the blade, gently push the comb to the blade, so that the comb and the blade are tightly fitted and then release your fingers to complete the installation of the comb. When disassembling, remove the teeth end of the comb to complete the disassembly.



Figure 1.5



Figure 1.6

Once finished installation, the back side of the clipper is shown as in the picture.
Step six: Push the button on top of the clipper for cutting hair.



Figure 1.7

NOTE: Please remove the blade from the clipper when charging to avoid accidentally injury.

2. Removal of blade

Step one: Hold the blade and apply a slight outward force to separate the blade from the clipper.



Figure 2.1

Step two: Slide the blade off the clipper snap to complete removal.



Figure 2.2

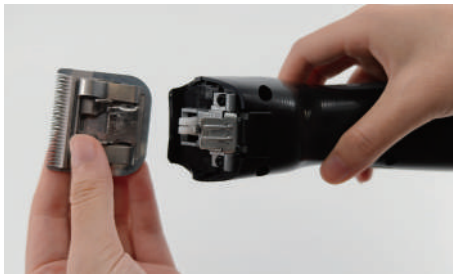

Figure 2.2

3. Blade Cleaning (MC-989KIT/MC-990KIT)

Press the cleaning button on the washing tray, and place the clipper with blade to the water, the clipper will run at highest speed to clean the blade. The clipper will operate for 2 minutes and stop washing automatically.



Figure 3

Warning

1. Application

This product is mainly used for pet shaving, and to realize high efficient hair grooming.

2. Applicable to:

Pets. The product is designed for small and large pets, such as dogs, cats,and etc.

3. Personal Protection

User should be alert to possible dangers when operation, such as electric shock during charging.

4. Power Supply

User should check if the power supply is normal before use, and check if the power cord is connected properly when operation. No water should be exist before plugging into the power socket.

5. Lubricate before Use

The Blade should always use special oil for lubrication, before and after use. Frequently coat with oil not only to ensure that the cutting efficiency of the blade, but can also ensure the service life of the clipper.

6. Battery

If the clipper has not been used for a long time, please remove the battery. Leave the battery unused in the clipper for a long time would shorten the life of the battery.

7. Please read the User Manual before use.

www.groomart.hu I hello@groomart.hu I www.groomart.eu